


FIT AND ADJUSTMENT

Do not modify the vest or its components in any way

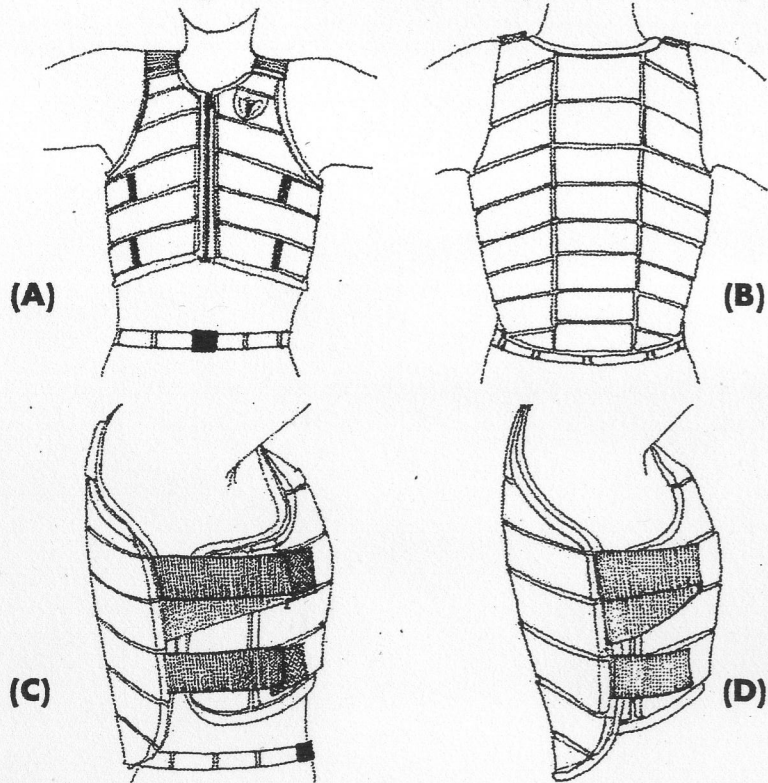

Length – vest front should extend downwards in front to the area of the lower rib as illustrated in Diagram (A).

Spine – the rear of the vest should cover down to approximately the waist or belt line as illustrated in Diagram (B).

Side Adjustment – Diagram (C). When fully extended to the largest size there should be no gapping in the side padding.

– Diagram (D) When fully closed to the smallest size there should be an overlapping of the side pad. But not an overlapping of the front and back body padding.

Size Chart

SIZE	XS	S	M	L	XL	XXL	XXXL	Custom
CHEST	30-32	32-34	36-38	40-42	44-46	48-50	52-54	

SIZING

Vest sizing is dependant on body size and shape. It is suggested that you first pick the indicated size from the sizing chart. Then try on the vest to determine the exact correct fit. Moving up or down accordingly in size for the correct size/fit.

WARRANTY

Phoenix guarantees its vests against all defects in workmanship for a period of 6 (six) months from the date of purchase.

Phoenix will not warranty any damage incurred by forces exceeding the inherent strength of the materials used in the construction of the vest nor will Phoenix be responsible for damage occurring to the product from uses other than those originally intended for the product.

All warranty returns must be accompanied by a copy of the bill of sales. All warranty claims and returns must first be authorized by Phoenix Performance Products Inc.

Toll Free 1.888.313.8842 www.phoenixperformance.com



7550 Hwy 27, Unit 4, Vaughan, Ontario CANADA L4H 0S2

Phone: 1-905-652-8493 Fax: 1-905-652-9561

Website: www.phoenixperformance.com